

# **AIRBIRD**

SHUTTER EXHAUST FAN

**User Manual**

## WELCOME

Thank you for choosing AITECAC. We place great emphasis on product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to contact us.

Visit [www.aitecac.com](http://www.aitecac.com) and click contact for our contact information.

### E-MAIL

[sales@aitecac.com](mailto:sales@aitecac.com)

### WEB

[www.aitecac.com](http://www.aitecac.com)

### TEL

(888) 990-7469

## PRODUCT

AirBird S10

AirBird S12

AirBird T10

AirBird T12

## MODE

Manual control

Manual control

Program control

Program control

# SECURITY WARNING



Please install the fan in a fixed place and tighten the fixing screws. Make sure there are no obstacles nearby before operating it.



Don't touch the blades with your hands when the fan is running.



Don't remove or modify the motor yourself.



Please unplug the power cord if you don't use the device for a long time.

# MANUAL INDEX

## **Product Introduction:**

Key Features .....	Page 1
Product features .....	Page 2

## **Instruction Manual:**

Installation .....	Page 4
Connect Power Supply .....	Page 6

## **Control System:**

T-Series Programming .....	Page 9
S-Series Programming .....	Page 12

 
## **Service Manual:**

Warranty .....	Page 13
----------------	---------

# KEY FEATURES


## METAL FRAME

Metal frame can be used in harsh environments.

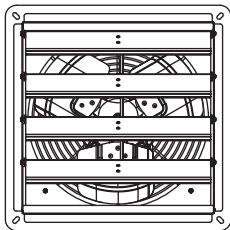


## ALUMINUM SHUTTER

 The aluminum shutter opens easily during operation and seals well when closed.

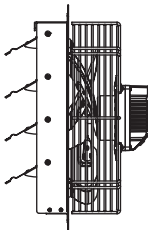

## SMART CONTROLLER

 Programmable control, Temp., Humidity and time parallel control to meet your needs.




## SPEED CONTROLLER

The manual control has a total of 5 levels to adjust the wind speed and is easy and convenient to use.

## EC MOTOR

The EC external-rotor motor has a long life, high energy efficiency, and low noise.
 
# PRODUCT CONTENTS

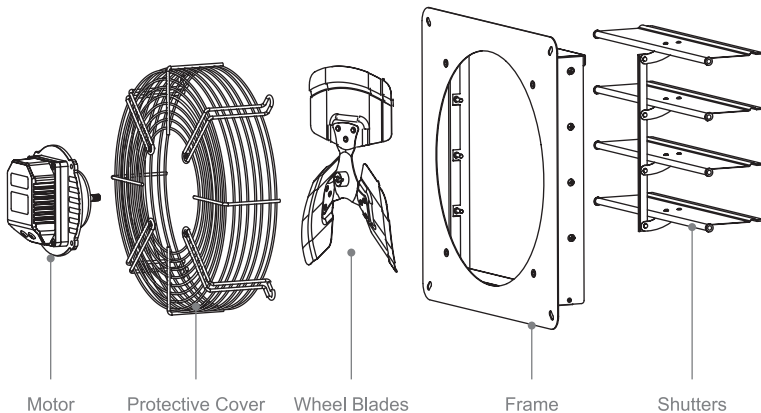


**NOTE:**

All illustrations are for reference only and the specific appearance and features are dependent on the actual product purchased.

# PRODUCT CONTENTS
 
## AIRBIRD T-Series



**SMART  
CONTROLLER**  
(×1)



**SENSOR**  
(×1)



**WOOD SCREWS  
(WALL HANG)**  
(×2)



**WOOD SCREWS  
(WALL MOUNT)**  
(×2)



**MACHINE SCREWS  
(WALL MOUNT)**  
(×2)

## AIRBIRD S-Series



**SPEED  
CONTROLLER**  
(×1)

 


**WOOD SCREWS  
(WALL MOUNT)**  
(×2)



**MACHINE SCREWS  
(WALL MOUNT)**  
(×2)

## FAN UNIT (Included in both S-Series and T-Series)



**SHUTTER  
FAN UNIT**  
(×1)



**DUCT  
CLAMP**  
(×4)



**CABLE TIE  
MOUNT**  
(×4)



**MACHINE SCREWS  
(WALL MOUNT)**  
(×4)




**WOOD SCREWS  
(WALL HANG)**  
(×4)

# INSTALLATION
 
## MOUNTING

### STEP 1

Choose the appropriate tool according to the size of the fan frame to cut out the installation opening on the wall.

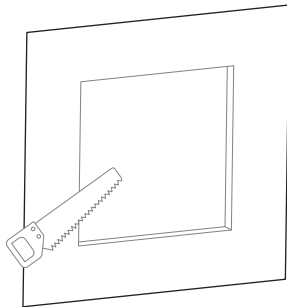

### NOTE:

It's recommended that the fan be installed opposite the vent to facilitate air circulation. Since hot air rises, a higher installation position should be selected if installation conditions permit.

 


# INSTALLATION

## MOUNTING


### STEP 2

Place the outer frame of the fan in the cutout opening and trace the positions of the four mounting holes with a pencil, then remove the fan and drill four mounting holes with an electric drill.

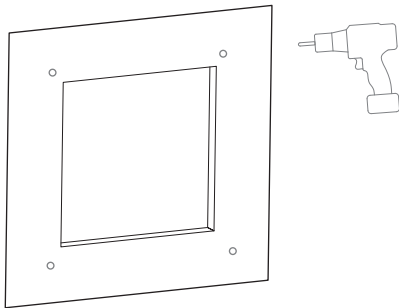

### STEP 3

 Put the fan into the opening and select suitable screws to fix the fan on the wall with an electric screwdriver.

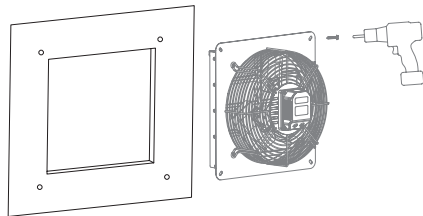


# CONNECT POWER SUPPLY

## T-SERIES


### STEP 1

 Insert the sensor plug into the controller.

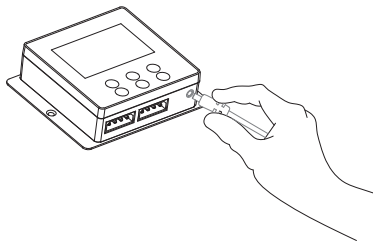

### STEP 2

 Fix the probe in the room, preferably in the hottest and most humid place.

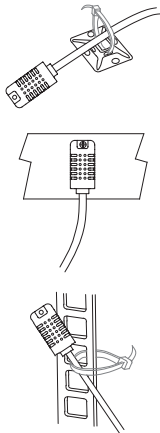


# CONNECT POWER SUPPLY

## T-SERIES

### STEP 3

Plug the fan's control cable into the controller, then plug the power cord into the wall outlet to power the fan and controller. Note: This product is designed for wide voltage and can operate at 100-240V AC.

 **NOTE:** If only one fan is connected to the controller, it must be connected to the port with the power symbol.

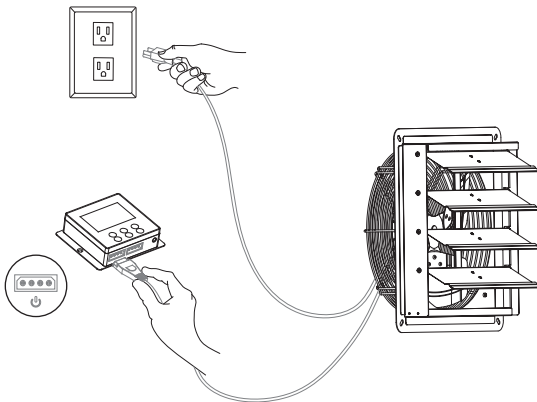


# CONNECT POWER SUPPLY

## T-SERIES

### STEP 4

 The controller can be connected to two fans to share programming.

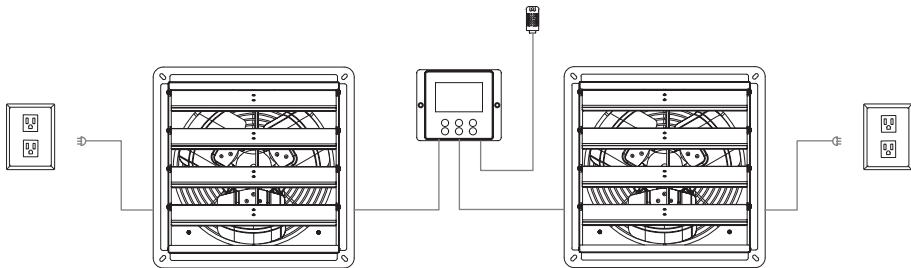

# CONTROL SYSTEM

## T-SERIES

### 1. MENU KEY

Each time the menu key is pressed to set the options, it's used to set the temperature unit, temperature, and humidity page conversion.

### 2. UP / DOWN BUTTON

Used to adjust the settings in the options; the up and down buttons are used to increase and decrease the values, respectively, and the temperature unit option is used to change the unit.

### 3. TIME SYSTEM KEY

 
Press the first button to set the start time, press the second button to start the cycle time, and press the third button to turn off the time system.

### 4. WIND SPEED KEY

Each time you press the air speed key to set the wind speed, the gears 1-5 will be switched one after another.

### 5. OPEN THE BUTTON

Switches the device ON / OFF with each press.

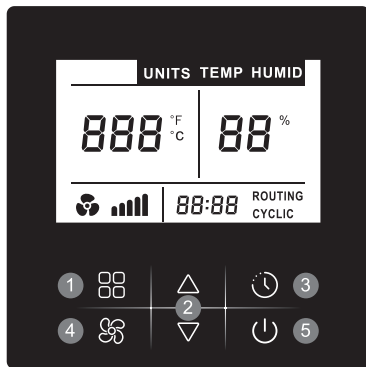


# CONTROL SYSTEM

## T-SERIES

### 1. SETTING THE UNIT

 Use the MENU button to select the UNITS option. Press the UP/ DOWN button to select the desired temperature unit for the °F / °C conversion.

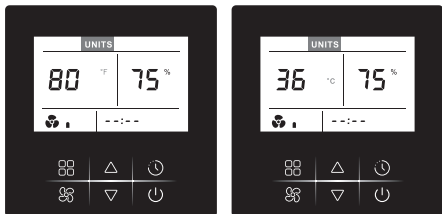


### 2. TEMPERATURE CONTROL PROGRAM

Use the MENU button to select the TEMP option, press the UP / DOWN button to set the temperature at which the fan should start. If the temperature is higher than the set value, the fan will run.

Setting range: 37 °F ~ 176 °F / 1 °C ~ 80 °C / OFF, each time you press the UP / DOWN button, the value will change by 5 °F / 1 °C. Long press can adjust the value quickly.

When OFF is set, the function is off.

 The factory setting is 86 °F.

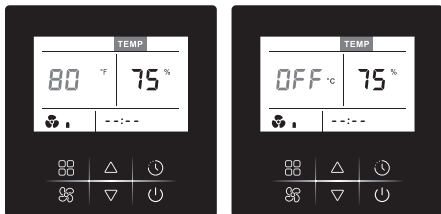

# CONTROL SYSTEM

## T-SERIES

 
 
### 3. HUMIDITY CONTROL PROGRAM

Use the MENU button to select HUMID option, press the UP / DOWN button to set the humidity at which the fan should start. If the humidity is higher than the set value, the fan will run.

Setting range: 0 ~ 99% RH / OFF, each time you press the UP / DOWN button, the value will change by 1%. Long press can adjust the value quickly.

When OFF is set, the function is off.

The factory setting is 50% RH.

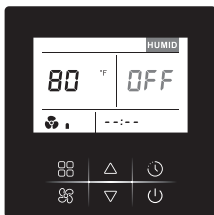
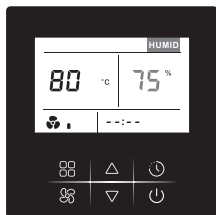


### 4. TIMING PROGRAM

Use the TIME button to select ROUTING option. Use the UP / DOWN button to set how long you have to run. After setting, the device will stop running on time.

Use the TIME button to select the CYCLIC option. Use the UP / DOWN button to set the standby time during a run. After the settings are completed, the device will automatically start and shut down on time.

  Note: "-:--" indicates that the time control function is turned off.

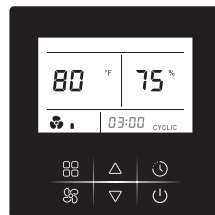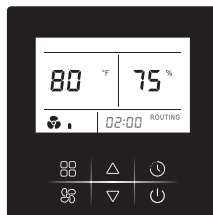

# CONTROL SYSTEM

## T-SERIES

### NOTICE:

If the TEMP and HUMID control program is set at the same time, the fan can be started if a condition is met.

The TEMP / HUMID control program and the TIME control program can be processed simultaneously.

If the TEMP and HUMID meet your needs, the operation cycle can be set based on time.

If the conditions TEMP and HUMID cannot be fulfilled, the process is aborted.

When the power supply is restored after a power failure, the fan operates according to the previously set parameters.

## S-Series Manual

 
### FAN SPEED ADJUSTING

The controller has only one button to control fan speed from level 0 - 5 / OFF cycle. Press the button to increase the fan speed by one stage.

### POWERING ON/OFF

Press the fan speed button once to turn the fan on when it's off, and press it again to turn it off when it's at level 5. Or in any gear long press 3 sec off the fan.

When power is restored after a power failure, the fan will operate according to the previously set parameters.

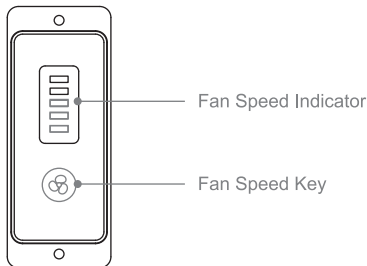



# WARRANTY

Upon receipt of the goods, the customer must log in to [www.aitecac.com](http://www.aitecac.com) to fill in the warranty registration form and submit it to AITECAC. We will receive your purchase and installation information and save it.

If the warranty registration is not sent to us, the warranty period will begin from the date the goods leave the warehouse. Be sure to record the serial number and installation date. You will need this information to receive the RA number.

The product has a shelf life of two years. If warranty service is required, The customer must contact AITECAC Technical Support by email: [sales@aitecac.com](mailto:sales@aitecac.com) or by calling the local technical service phone number (888) 990-7469, available Monday to Friday (7:00 AM to 4:00 PM PST) to obtain a return authorization (RA number).

When AITECAC receives the equipment (whether in the maintenance center or in the warehouse), AITECAC, it will carry out the initial inspection. If the warranty is determined to be invalid, the customer must then pay all related maintenance and transportation costs for unit maintenance.

The warranty plan does not cover abuse or misuse of the unit. This includes physical damage, product immersion, incorrect installation (such as incorrect voltage input), and misuse for any reason other than the intended purpose. AITECAC shall not be responsible for any indirect loss or incidental damage of any nature caused by the product.

From the date of replacement, new equipment will be provided to the customer during the warranty period of the same year.

After parts are repaired or replaced by AITECAC, the original warranty will continue to apply until the due date.





## WARRANTY REGISTRATION CARD



### PRODUCT REGISTRATION FORM

Register your product by filling in the product registration form below.

**ORDER NUMBER:** \_\_\_\_\_

**MODEL:** \_\_\_\_\_

**SERIAL #:** \_\_\_\_\_

**INSTALLER:** \_\_\_\_\_

**INSTALLATION DATE:** \_\_\_\_\_

**NAME:** \_\_\_\_\_

**ADDRESS:** \_\_\_\_\_

**CITY:** \_\_\_\_\_

**STATE:** \_\_\_\_\_

**ZIP:** \_\_\_\_\_

**PHONE #:** \_\_\_\_\_

**EMAIL:** \_\_\_\_\_

**NOTE:** If you have any questions, please feel free to contact us at [\(888\) 990-7469](tel:8889907469) or [sales@aitecac.com](mailto:sales@aitecac.com)



Add: 14752 Yorba Ct Chino CA 91710 US

Tel: (888) 990-7469

Email: [sales@aitecac.com](mailto:sales@aitecac.com)